


VCR/DVD CONTROLS SCREEN

This screen appears when you touch the VCR/DVD button on the Main Menu screen.

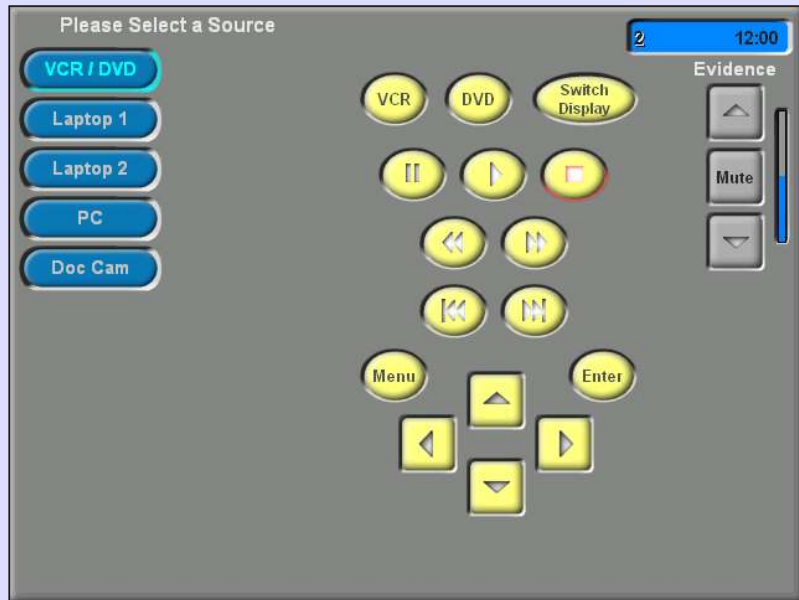

VCR/DVD Controls

Use the standard controls to operate the VCR/DVD player remotely from the Judge's bench:

Push Button	Function
VCR	Press this push button at any time to select the VCR as the active evidence source. The VCR/DVD Controls Screen appears.
DVD	Press this push button at any time to select the DVD as the active evidence source. The VCR/DVD Controls Screen appears.
Switch Display	Press this push button to switch between the VCR and DVD player.

VCR/DVD CONTROLS - CONTINUED

Push Button	Function
■	Stop – Touch this button to stop the current chapter/track on the DVD or tape on the VCR.
▶	Play – Touch this button to play the current chapter/track on the DVD or tape on the VCR.
	Pause – Touch this button to pause the current chapter/track on the DVD or tape on the VCR. To resume playback, touch the Play button.
◀◀	Skip Back - While a DVD disc is in play mode, touch the Skip Back button to jump backward through disc chapters/tracks. Skip Back will jump to the beginning of the current chapter/track. Touch Skip Back again to jump to the beginning of the previous chapter/track.
◀◀	Search Back - While a disc is in play mode, touch the Search Back button to visually search backward at variable speeds. As for the VCR, touch this button to rewind the tape.
▶▶	Search Forward - While a disc is in play mode, touch the Search Forward button to visually search forward at variable speeds. As for the VCR, touch this button to fast forward the tape.
▶▶	Skip Forward - While a DVD disc is in play mode, touch the Skip Forward button to jump forward through disc chapters/tracks. Skip Forward will jump to the beginning of the next chapter/track.
Menu	Touch this button to access the DVD's disc menu choices.
◀, ▲, ▶, or ▼	Use these buttons to navigate through the DVD's disc menu options, if available. Touch up, down, left, or right to highlight menu choices.
Enter	Touch this button to make your selection within the Disc menu.